


MENVIER FIRE SYSTEM MF400

PANEL CONTROLS AND INDICATORS

Visual

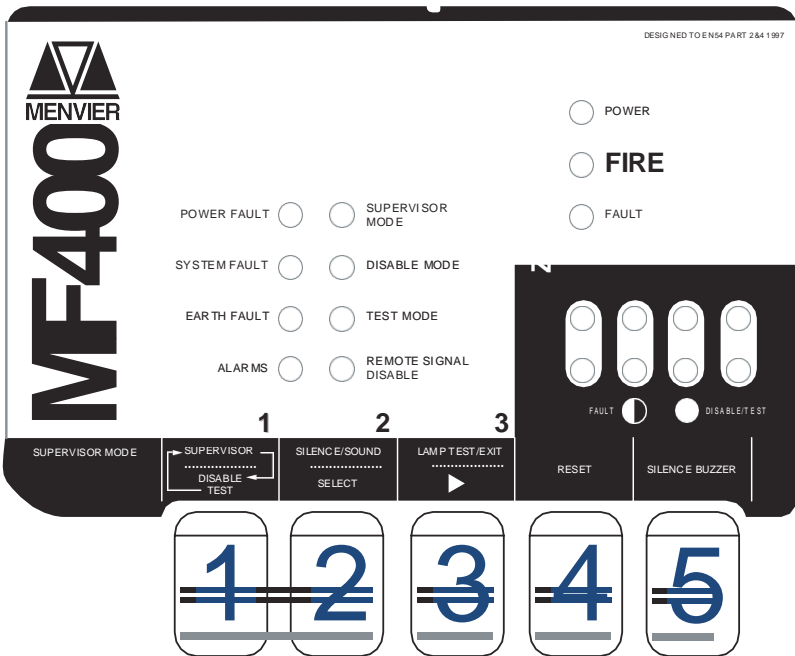

Audible

Piezo buzzer integral within panel, common to fire and fault.

Keys

The controls of the panel are via a 5 key keyboard on the front of the panel.

A key press is acknowledged by a blip of the internal panel buzzer

and in the normal mode the Supervisor Mode LED will flash.

Keys labelled 1, 2 and 3 have more than one function, these are described below.

KEY	Normal Operation	Supervisor Mode	
	Primary function	Secondary function	Tertiary function
1	Code Entry	Toggle for Supervisor Mode Disable Mode and Test Mode	Toggle for Supervisor Mode Disable Mode and Test Mode
2	Code Entry	Silence/Re-Sound Alarms	Select Function-Disable or Test
3	Code Entry	Lamp Test/Exit	(Toggle through Functions) Disable or Test
4	NONE	RESET	RESET

How to deal with a False Alarm activation

Enter the 4 digit access code **2 1 1 3** to access Supervisor Mode.

SEE the Supervisor LED flash indicating the panel is in Supervisor Mode.

[NOTE: Auto time-out of supervisor mode will occur 2 minutes after last action.]

Press the **SILENCE/SOUND ALARMS** (key 2)

The alarm sounders will silence.

pressing 'SOUND/SILENCE' again will sound the alarms.

If a fire is detected on another zone the alarms will re-sound.

Note:- If the alarms are silenced and fire condition exists the panel buzzer will sound continuously.

As per the full user instructions.....identify the zone of activation and then the device activated by locating the device with the led indicator illuminated bright red. If the cause of the activation is known and no hazard remains the system can be reset.

Always record the device of activation in the log book.

RESET (key 4)

Pressing 'RESET' at any time while in Supervisor Mode will

- Reset the panel, clearing any fire, fault or Test Mode information.
- If a fire or fault exists the panel will re-enter the fire condition.
- Operating RESET will not clear disable information.

Press the **'Lamp Test/Exit'** (key 3) to exit from Supervisor Mode

While the supervisor LED is flashing the user can perform a lamp and buzzer test.

All LED's will light and the buzzer will sound.

This also exits the Supervisor Mode.

FIRE CONDITION

If the panel receives a fire signal from a manual call point or detector

- the red fire LED will light,
- the panel buzzer will sound,
- the alarm devices will be activated and
- the remote signal will also activate.
- The red zone fire LED will light corresponding to the zone in fire.
- Any new zone in a fire condition will light